


Double Chimney Bracket Instructions.

SKU: M1001037-26/02/19

This Double Chimney bracket is ideal for use when a longer mast is required. It allows for greater spacing between mounting points. We recommend dropping a longer mast down below the lower bracket to balance the weight of the mast above the top bracket.

Mounting Instructions.


1. Decide where you will want the two brackets to mount on the chimney. Assemble the J-Bolt with the strap already attached to one of the Holes on the bracket. (See image below).

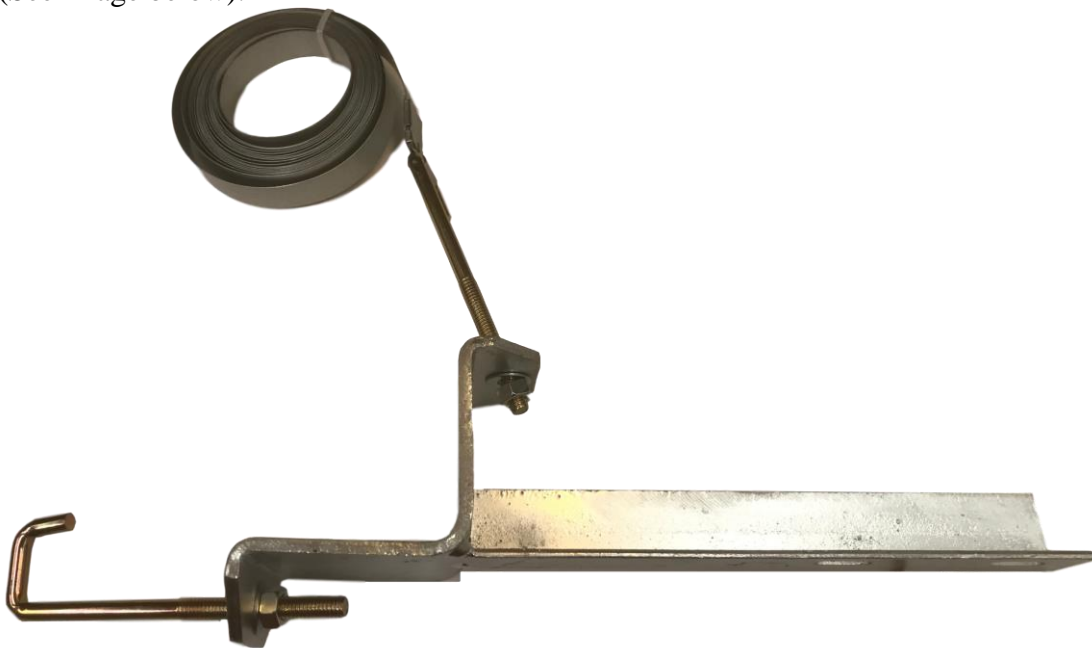

2. Put the second J bolt in the other hole and have both with at maximum or close to adjustment available.
3. Take the bracket and place into position at the desired corner and height. Unravel the strap around the chimney and back to the second J- Bolt and bend it around the J-bolt end and pull it tight. Cut excess strap off using suitable Tin snips or side cutters.




4. Assemble the clip to the folded over strap as shown above. Note you may need to open the lugs a bit using some pliers.
5. Slide the clip along until it is close to the J- bolt.

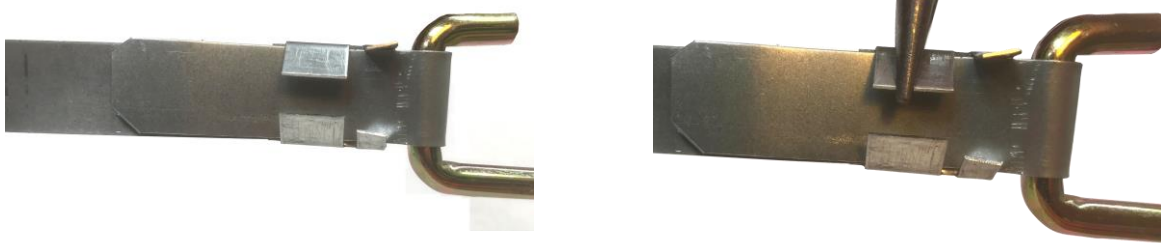

6. Using a pair of pliers fold the rear lugs down tight on the strap. (See figure above.)



7. Fold the strap over the folded down lugs and trim the strap length to be able to fold down flat just near the J- bolt end. (Refer to figure).

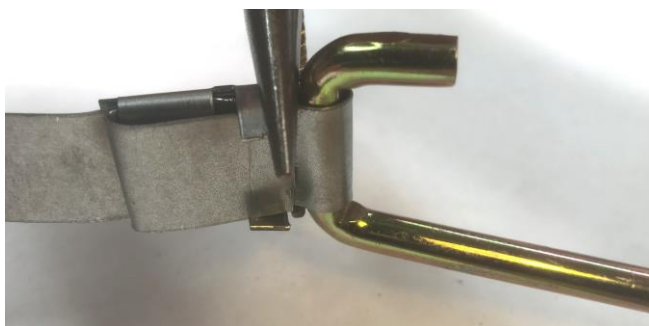

8. Using a pair of pliers fold down the smaller lugs to secure the fold of the strap.
9. Tighten both J-Bolts to secure the bracket in place.
10. Repeat for the second bracket.

Attach your antenna and cable to your mast and install your mast and bolt into place using the supplied U-Bolts.