


# An example of one possible use of the PM8L-P fitting.

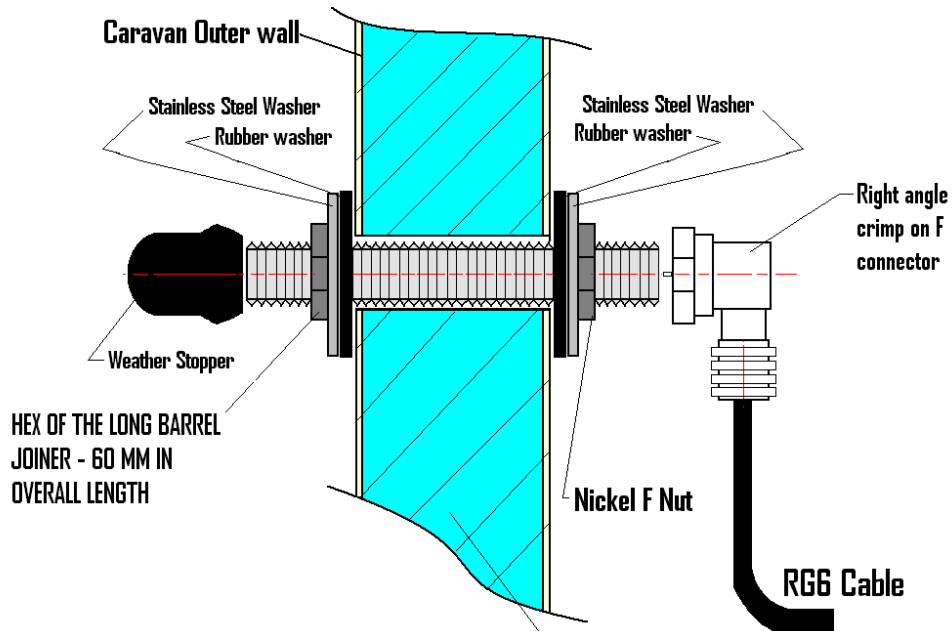

NOTE: FOR "FIBREGLASS FOAM WALL SANDWICH" TYPE OF CONSTRUCTION - RUN CABLE INSIDE VAN IN BACK OF SHELVES, CUPBOARDS, ETC.  
MATE WITH A PM4 OR AN ACTIVE CONNECTION KIT (CGA).

